





Calls

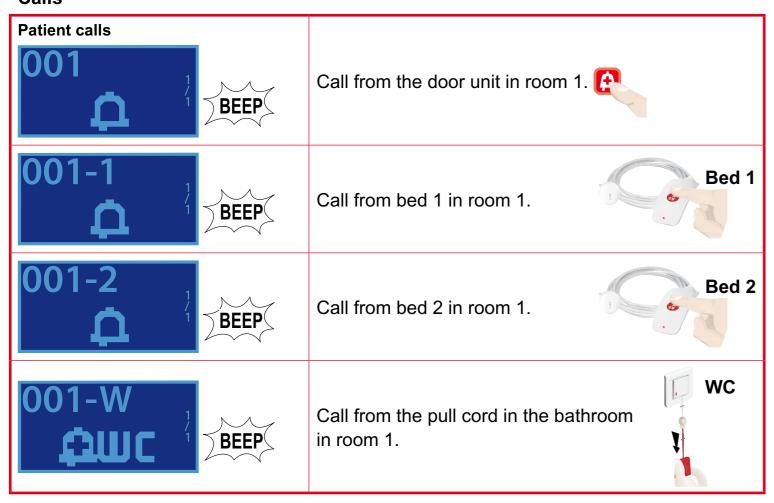


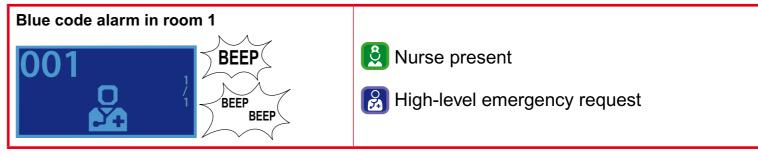

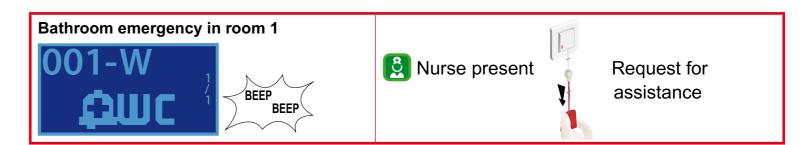




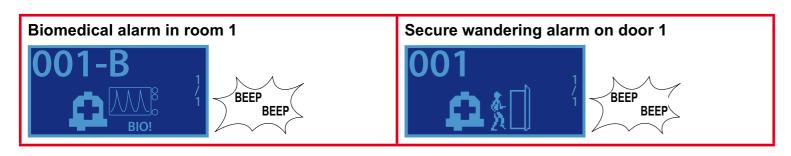

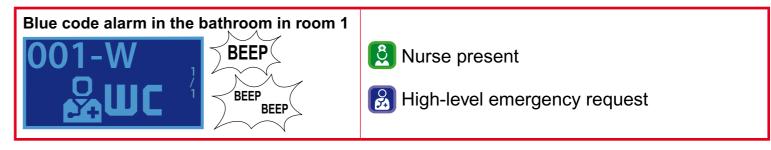



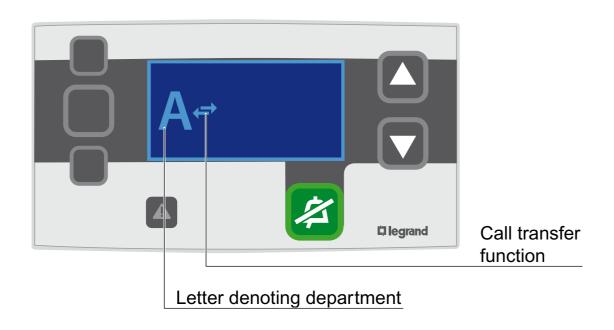

Letter Department Lettur Department

To transfer a call to another department

Main control unit with call transfer function enabled	
A ←	Press the button on the control unit.
Configuring the call transfer on the control unit	
A	Select the department to which you wish to transfer the call by pressing the button
Confirming the transfer	
A⇔b	Confirm the transfer by pressing the button on the control unit.
Transferring call from dept. A to B	
A → B	

To cancel the call transfer

Transferring call from dept. A to B	
A⇔ B	
Confirming the transfer	
A≅b	Press the 💋 button on the control unit.
Configuring the call transfer on the control unit	
A	Select the "empty" department to cancel the transfer by pressing the button.
Main control unit with call transfer function enabled	
A ⇔	Press the 💋 button on the control unit.